GB AWO 12963

PROGRAMME CHART

A. Programme selector knob and "Start/Pause" button

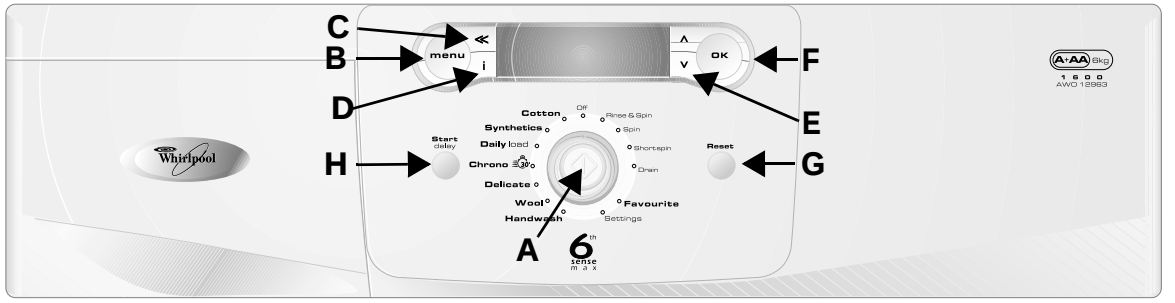

LCD-Display

B. "Menu" button ( )

C. "Back" button

D. "Info" button

E. "Up" and "Down" buttons to set temperature and spin speed

F. "OK" button for confirmation

G. "Reset" button

H. "Start Delay" button

6th sense max

6th Sense intelligent technology always guarantees perfect results with maximum efficiency whatever the wash load.

Programme	Care Labels	Type of wash/ Degree of soiling	Max. load Kg	Detergent and Additives: Softener	Detergent and Additives: Main wash	Detergent and Additives: Pre-wash	Selectable special options = ❇: Start Delay	Pre-wash	Intensive Rinse	Rinse Hold	Speed Reduction	Easy Iron	Extra care	Temperature °C	Max. Spin Speed rpm	Notes
Cotton	95 60 30 40	Normal to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton or linen.	6.0	❇	Yes	❇	❇	❇	❇	❇	❇	❇	❇	20 to 95	1600	"Prewash" can be additionally selected for heavily soiled laundry at any temperature.
Synthetics	60 50 40 30	Normal soiled blouses, shirts and other outer clothing made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or mixtures of these fibres with cotton.	2.5	❇	Yes	❇	❇	❇	❇	❇	❇ 1)	❇	❇	20 to 60	1000 1)	"Prewash" can be additionally selected for heavily soiled laundry.
Daily Load	60 30	Normal to lightly soiled textiles made of cotton and/or easy care fibres.	3.0	❇	Yes	–	❇	–	❇	❇	❇	❇	–	30 to 60	1600	–
Chrono	60 50 40 30	Lightly soiled outer and sport clothing made of cotton, polyester, polyamid and mixed cotton fabrics.	3.0	❇	Yes	–	❇	–	–	❇	❇	–	–	20 to 60	1600	–
Delicates	30 40	Curtains and delicate dresses, skirts, shirts and blouses.	1.5	❇	Yes	❇	❇	❇	–	❇	❇ 1)	–	–	20 to 40	1000 1)	–
Wool		Only woollens with a felt-free finish, labelled with the woolmark and stated as machine washable.	1.0	❇	Yes	–	❇	–	–	❇	❇ 1)	–	–	20 to 40	1000 1)	If you select "Rinse Hold" do not leave items to soak for too long.
Handwash		Textiles made of linen, silk, wool or viscose marked as "handwashable".	1.0	❇	Yes	–	❇	–	–	❇	❇ 2)	–	–	20 to 30	400 2)	If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.
Rinse & Spin	–	–	6.0	❇	–	–	❇	–	❇	❇	❇	–	–	20	1600	Same as the spin cycle in the "Cotton" programme.
Spin	–	–	6.0	–	–	–	❇	–	–	–	❇	–	–	–	1600	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.
Short spin	–	–	1.5	–	–	–	❇	–	–	–	❇ 1)	–	–	–	1000 1)	A very gentle spin is used in this programme. Same as the spin cycle in the "Wool" programme.
Drain	–	–	–	–	–	–	❇	–	–	–	–	–	–	–	–	This programme only drains (alternative method of terminating the programme after "Rinse Hold" without spinning). In addition all running programmes can be cancelled with this programme.

1) For improved garment care spin speed is restricted to 1000 rpm in this programme.

2) For improved garment care spin speed is restricted to 400 rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA

CONSUMPTION DATA *

Programme	Temperature (°C)	Size of wash (kg)	Water (l)	Energy (kWh)	Programme duration ** approx. (hours : minutes)
Cotton	95	6.0	49***	1.90	2:05
Cotton	60	6.0	44	1.14	2:25
Cotton with "Extra care" ****	60	6.0	44	1.02	2:35
Cotton	40	5.0	42	0.70	2:05
Easy Care	60	2.5	55***	0.70	1:35
Easy Care	40	2.5	50	0.50	1:20
Daily Load	40	3.0	43	0.55	1:05
Rapid Plus	30	3.0	37	0.40	0:35
Delicates	30	1.5	60	0.50	0:50
Wool	40	1.0	60	0.50	0:45
Handwash	30	1.0	45	0.40	0:40

* Consumption **values** were measured in normal conditions in compliance with Standard IEC/EN 60456.
** The **programme duration** may vary from the chart values. The washing machine will allow for individual household conditions and adapt the programme run time accordingly.
*** To reduce **the water temperature, some cold water is** added at the end of the main wash cycle, before the pump drains the water out.
**** Reference Programme for Energy Label

POUR IN DETERGENT, CLOSE THE DOOR AND SELECT A PROGRAMME

Add the detergent as described in the chapter "Detergent and Additives" in the booklet.

1. Turn the **programme selector knob** in any direction to the desired programme.
   This appears in the LCD display, together with spin speed, wash temperature and wash programme duration (in hours and minutes). The indicator light above the **"Start/Pause"** button will blink.
2. Temperature and spin speed can be changed using the **"menu"** button as well as the " V " and " Λ " buttons.
3. The additional options available for the wash programme can be selected with the **"menu"** button.

PRESS THE DESIRED SPECIAL OPTION BUTTON

"Spin Speed"

- A maximum spin speed is assigned to each programme.
- Press the **"menu"** button until "To set Spin Speed" appears in the LCD display. The set spin speed blinks and can be changed with the " V " and " Λ " buttons.
- If the spin speed "0" is selected, the final spin is cancelled. The water is drained out only.

"Prewash"

- Only for heavily soiled laundry (for example. sand or granular dirt). Programme duration is increased by some 15 min.

"Intensive rinse"

- An additional rinse cycle is carried out.
- This additional option is particularly suitable for areas with very soft water, for washing baby linen and helping people with detergent allergies.

"Rinse hold"

- The laundry remains in the last rinse water without being spun: discoloration of the laundry and additional creasing are prevented.
- This option is particularly recommended for the programme "Easy Care" or "Delicates".
- This additional function is particularly useful if you want to postpone spinning to a later time.

Note: The programme has reached "Rinse hold" when the corresponding symbol blinks in the LCD.

Terminate the "Rinse Hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the appropriate spin cycle for the current programme.
- If you do not wish to spin the clothes, turn the programme selector knob to "Drain" and press the **"Start/Pause"** button.

"Extra care"

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption can be achieved.

"Easy Iron"

- To lessen creasing, the water quantity is increased and the clothes are spun very gently at reduced power. This makes your laundry significantly damper at the end of the programme.

STORE INDIVIDUAL PROGRAMME ("Favourite")

- Turn the programme selector to "Favourite".
- Select one of the 10 storage spaces using the " V " or " Λ " button and confirm with **"OK"**.
- A list of all the available wash programmes appears in the LCD. Select the desired programme with " V " and " Λ " and confirm with **"OK"**.
- You can then, as already described, select additional options for the wash programme and set temperature and spin speed as desired.
- When all the settings have been made and confirmed with **"OK"**, the programme is stored in the selected storage space and can be reselected at any time and run using **"Start/Pause"**.

START DELAY

The "Start Delay" allows you to run the machine at your convenience, for example at night when electricity is cheaper.

- Press the "Start Delay" button. Using the " V " and " Λ " keys, you can set the time on the display to when you want the wash programme to start, then confirm this with **"OK"**.
- Press the **"Start/Pause"** button. "Start at ..." appears in the LCD display until the preset start time is reached. The wash programme then starts automatically.
- During the programme, the remaining time appears in the LCD.

"Start Delay" correction

- If you have already confirmed the desired start time with **"OK"** or have already pressed **"Start/Pause"**, they can still be changed. To do this, press the "Start Delay" button again.
  The set time blinks and can be changed with the " V " and " Λ " buttons. Then you only need to confirm the changed time with **"OK"** again.

PROGRAMME START

After you have selected the programme and any additional options, the indicator light above the **"Start/Pause"** button blinks. Turn on the tap and start the programme by pressing the **"Start/Pause"** button.
The indicator light above the button will now illuminate.

The stage of the wash programme appears in the LCD, as well as the time remaining until the end of the wash programme.

DOOR LOCK

Within the first 15 minutes after the start of the "Cotton" and "Easy Care" programmes the door can be opened to add further laundry.
"You can add an item" will appear in the LCD as long as this option exists. This is not possible if "Rapid Plus" is selected.

PROGRAMME END

- The time remaining on the LCD shows 0:00, and displays "END OF CYCLE".

1. Turn the programme selector with the marking to the top.
2. Close the water tap.
3. Open the door and unload the machine.

RESELECT AFTER PROGRAMME START

A newly-selected programme will continue in the same programme section during which the current programme was interrupted. Therefore do not add any more detergent.

1. Press the **"Start/Pause"** button to interrupt the programme.
   The indicator light flashes.
2. Select the new programme (with temperature), any additional options and - if you wish - another spin speed. In this way you can also select an additional option later, without changing the current programme.
3. Press the **"Start/Pause"** button again to re-start the programme.

- If you are in the "Prewash" programme step this additional option can not be deselected as described (to do this see "Cancel/Delete programme")

CANCEL/DELETE PROGRAMME

1. Press the **"Start/Pause"** button to interrupt the programme.
   The indicator light flashes.
2. Press the "Reset" button.
   "Do you want reset" appears in the LCD.
3. Confirm with the **"OK"** button to start draining the water.

Whirlpool is a registered trademark of Whirlpool USA

HOT / COLD FILL INSTRUCTION

If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

Make sure:

a) The connections are tightly fixed

b) Do not invert their position
(for example: cold fill into hot inlet valve and viceversa).

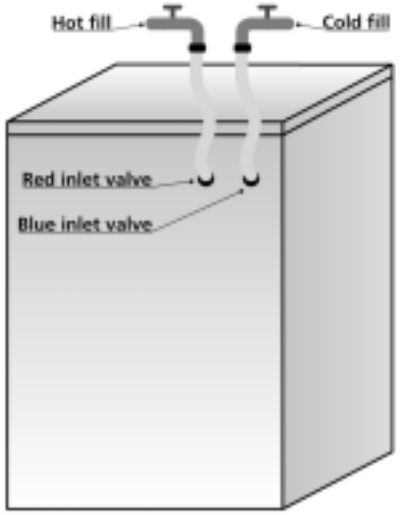

Fig.1

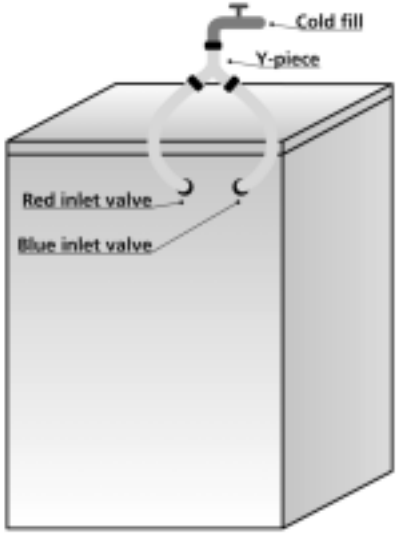

Fig.2

Do not allow children to operate, crawl on, near or inside your washer.
Note that during wash cycles, the surface temperature of the porthole door may increase.
Close supervision of children is necessary when the appliance is used near children.

If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector. The Y-piece connector can be ordered via our Service Organization or purchased in a specialized hydraulic component store.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provider hoses.

Make sure:
All connections are tightly fixed.

Whirlpool is a registered trademark of Whirlpool USA